

# NMEA 183 output interface

Product reference: 90-60-357



## USER GUIDE & INSTALLATION GUIDE

**nke** – Sailing competition

Z.I. Kerandré – Rue Gutenberg – 56700 HENNEBONT- FRANCE  
<http://www.nke.fr> – After sale service n°33 297 365 685

# TABLE OF CONTENTS

<b>1</b>	<b>PRESENTATION .....</b>	<b>3</b>
<b>2</b>	<b>INFORMATION CONVERTED BY THE NMEA OUTPUT INTERFACE .....</b>	<b>3</b>
<b>3</b>	<b>FRAMES TRANSMITTED BY THE NMEA OUTPUT INTERFACE .....</b>	<b>4</b>
<b>4</b>	<b>TECHNICAL SPECIFICATIONS.....</b>	<b>6</b>
<b>5</b>	<b>DIAGNOSTIC FOR 1<sup>ST</sup> LEVEL TROUBLESHOOTING.....</b>	<b>7</b>
<b>6</b>	<b>INSTALLATION .....</b>	<b>7</b>
6.1	LIST OF ACCESSORIES .....	7
6.2	INSTALLATION PRECAUTIONS.....	7
6.3	INSTALLATION OF THE INTERFACE.....	8
6.4	CONNECTING THE NMEA OUTPUT INTERFACE TO A PC AND A GYROGRAPHIC .....	9
6.5	CONNECTING THE NMEA OUTPUT INTERFACE TO A PC AND A TL25 .....	10
6.6	CONNECTING THE NMEA OUTPUT INTERFACE TO A PC AND AN NMEA INPUT INTERFACE .....	11
6.7	CONNECTING THE NMEA OUTPUT INTERFACE TO A LISTENING APPARATUS .....	12

## 1. PRESENTATION

---

The **NMEA output interface** allows the conversion of the **Topline** data present on the NMEA data bus, so as to allow the interfacing between your Topline network and the equipment from a different manufacturer.

When the **NMEA output interface** is connected to the COM port of a PC with navigation software, the navigation information (heading and distance to Waypoint, cross-track error) may be resent from the same COM port on the Topline network via a Gyrographic, a TL25 or an NMEA input interface.

The **NMEA 0183** standard is a specification for communication between items of marine equipment and GPS equipment. It is defined, and controlled, by the *National Marine Electronics Association* ([www.nmea.org](http://www.nmea.org)).

The 0183 standard uses a simple serial protocol to transmit a “phrase” to one or more listening units. An NMEA frame uses every ASCII character.

### IMPORTANT

- Read this user guide entirely before starting the installation.
- Any electrical connection on the **TOPLINE bus** must be carried out with the terminal box 90-60-417. Only use **TOPLINE bus** cable 20-61-001.

## 2. INFORMATION CONVERTED BY THE NMEA OUTPUT INTERFACE

---

Depending on the sensors connected to the **TOPLINE** bus, the following information is converted into NMEA format by the interface:

- Surface speed, daily log, total log
- Compass heading, UT time, UT date, depth
- Water temperature, air temperature
- Atmospheric pressure
- Apparent wind speed and angle
- True wind speed and angle
- True wind direction
- Heading and distance to waypoint
- Cross-track error, bottom speed and heading
- Latitude and longitude
- Mast angle
- Man over board

### 3. FRAMES TRANSMITTED BY THE NMEA OUTPUT INTERFACE

---

The frames transmitted by the NMEA interface depend on the sensors connected to the Topline bus.

Surface speed and compass heading:

**\$IIVHW,x.x,T,x.x,M,x.x,N,x.x,K\*hh**


|\_|\_|\_|\_Surface speed in kph

|\_|\_|\_|\_|\_Surface speed in knots

|\_|\_|\_|\_Magnetic compass heading

|\_|\_|\_True compass heading

Total log and daily log:

**\$IIVLW,x.x,N,x.x,N\*hh**

| | | | | |  
|\_|\_|\_|\_|\_Daily log in miles  
|\_|\_|\_|\_|\_Total log in miles

Depth:

**\$IIDPT,x.x,x.x,,\*hh**

| | | | | | | |  
|\_|\_|\_Sensor offset, >0 = surface transducer distance, >0 = keel transducer distance.  
|\_|\_|\_|\_|\_Bottom transducer distance

**\$IIDBT,x.x,f,x.x,M,,\*hh**

| | | | | | | |  
|\_|\_|\_|\_|\_Depth in metres  
|\_|\_|\_|\_|\_Depth in feet

Water temperature:

**\$IIMTW,x.x,C\*hh**

|\_|\_|\_|\_|\_Temperature in degrees C

Apparent wind angle and speed:

**\$IIVWR,x.x,a,x.x,N,x.x,M,x.x,K\*hh**

| | | | | | | | | |  
|\_|\_|\_|\_|\_|\_Wind speed in kph  
|\_|\_|\_|\_|\_|\_Wind speed in m/s  
|\_|\_|\_|\_|\_|\_Wind speed in knots  
|\_|\_|\_|\_|\_|\_Apparent wind angle from 0° to 180°, L=port, R=starboard

True wind direction and speed:

**\$IIMWD,x.x,T,x.x,M,x.x,N,x.x,M\*hh**

| | | | | | | | | |  
|\_|\_|\_|\_|\_|\_Wind speed in m/s  
|\_|\_|\_|\_|\_|\_Wind speed in knots  
|\_|\_|\_|\_|\_|\_Wind direction from 0° to 359° magnetic  
|\_|\_|\_|\_|\_|\_Wind direction from 0° to 359° true

**\$IIVWT,x.x,a,x.x,N,x.x,M,x.x,K\*hh**

I I I I I I I\_\_I\_Wind speed in kph  
I I I I I\_\_I\_Wind speed in m/s  
I I I\_\_I\_Wind speed in knots  
I\_\_I\_True wind angle from 0° to 180° , L=port, R=starboard

Air temperature:

**\$IIMTA,x.x,C\*hh**

I\_\_I\_Temperature in degrees C

Heading magnetic:

**\$IIHDG,x.x,,,\*hh**

I\_Heading magnetic

**\$IIHDM,x.x,M\*hh**

I\_\_I\_Heading magnetic

Heading true:

**\$IIHDT,x.x,T\*hh**

I\_\_I\_Heading true

Barometer:

**\$IIMMB,x.x,I,x.x,B\*hh**

I I I\_\_I\_Atmospheric pressure in bars  
I\_\_I\_Atmospheric pressure in inches of mercury

Mast angle:

**\$IIXDR,A,x.x,D,mastangle,\*hh**

I\_Measurement of the mast angle in degrees

UTC time and date:

**\$IIZDA,hhmmss.ss,xx,xx,xxxx,\*,\*hh**

I I I I I\_\_I\_Year  
I I I I I\_\_I\_Month  
I I I I I\_\_I\_Day  
I\_\_I\_Time

Geographical position, latitude and longitude:

**\$IIGLL,IIII.II,a,yyyy.yy,a,hhmmss.ss,A,A\*hh**

I I I I I I I\_\_I\_Statut, A= valid data, V= non valid data  
I I I I I I I\_\_I\_UTC time  
I I I I I\_\_I\_Longitude, E/W  
I\_\_I\_Latitude, N/S

Bottom heading and speed:

**\$IIVTG,x.x,T,x.x,M,x.x,N,x.x,K,A\*hh**

```
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
|_| |_|_True bottom heading
```

Cross-track error:

**\$IIXTE,A,A,x.x,a,N,A\*hh**

|\_|\_Cross-track error in miles, L= left, R= right

Heading and distance to waypoint:

**\$IIRMB,A,x.x,a,,,lll.l,a,yyyy.yy,a,x.x,x.x,x.x,A,a\*hh**

```
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | |
|_|_|_Direction of cross-track error, L/R
|_|_|_Distance of cross-track error in miles
```

Man over board:

**\$TRWPL,,,,,MOB,\*hh**

|\_|\_Name of the WP

**\$PMLR,05,01,02,037,\*hh** (this phrase launches the “MOB” procedure on compatible MLR GPS).

```
| | | | |_|_Checksum
| | | |_|_Data bytes (02= MOB key of the GPS)
| | | |_|_Number of data bytes (01 = only 1 data byte)
|_|_|_|_Type of phrase (05 = simulating key pressing on the keyboard)
```

#### 4. TECHNICAL SPECIFICATIONS

- Power supply: 10 to 16VDC.
- Power consumption: 20mA.
- Tightness: IP54.
- Topline bus connection cable: 3 metre length.
- NMEA connection cable fitted with SubD 9-pin connector: 3 metre length.
- Weight: 380g (cable included).
- Operating temperature: -10°C to +50°C.
- Storage temperature: -20°C to +60°C.
- Characteristics of the NMEA frames:  
The NMEA frames transmitted by the **NMEA output interface** comply with the NMEA 0183 V2.30 standard.

The format of the frames is: 4800 bauds / 8 bits with bit 7 at 0 / 1 start bit and 1 stop bit. With checksum.

The frames are continuously transmitted, and every frame is transmitted during each cycle.

Upon startup, the **NMEA output interface** sends a proprietary frame that indicates the Firmware's version number and creation date.

## 5. DIAGNOSTIC FOR 1<sup>ST</sup> LEVEL TROUBLESHOOTING.

This chapter can help you rapidly resolve minor problems which do not require the intervention of a specialist. Before contacting technical support, please check the troubleshooting table below.

Problem	Possible causes and solutions
<p>The listening apparatus does not display the data from the <b>NMEA output interface</b>.</p>	<p>The bus cable is not or is badly connected to the terminal box : check the plugging and the connection inside the terminal box. Check the state of the cables : they must not show any sign of wear or cut.</p> <p>The listening apparatus is not properly setup: NMEA 4800 bauds, 8 bits of data, 1 stop bit.</p> <p>Check that the NMEA frames transmitted by the <b>NMEA output interface</b> are compatible with the listening apparatus.</p> <p>You can check the frames using a PC with the <b>NMEA output interface</b> connected to a COM port and Windows HyperTerminal program (Start menu/All programs/Accessories/Communications/HyperTerminal). Port parameters: 4800 bits per second, 8 bits of data, no parity, 1 stop bit, no flow control.</p>

If you do not manage to solve the problem, please contact your distributor.

## 6. INSTALLATION

### 6.1 List of accessories

- TOPLINE Terminal box : 90-60-121

### 6.2 Installation precautions

The housing of the **NMEA output interface** is waterproof against water spray. Install the housing in a location that is unlikely to get flooded.

### 6.3 Installation of the interface

- Fix the housing using Ø4 screws

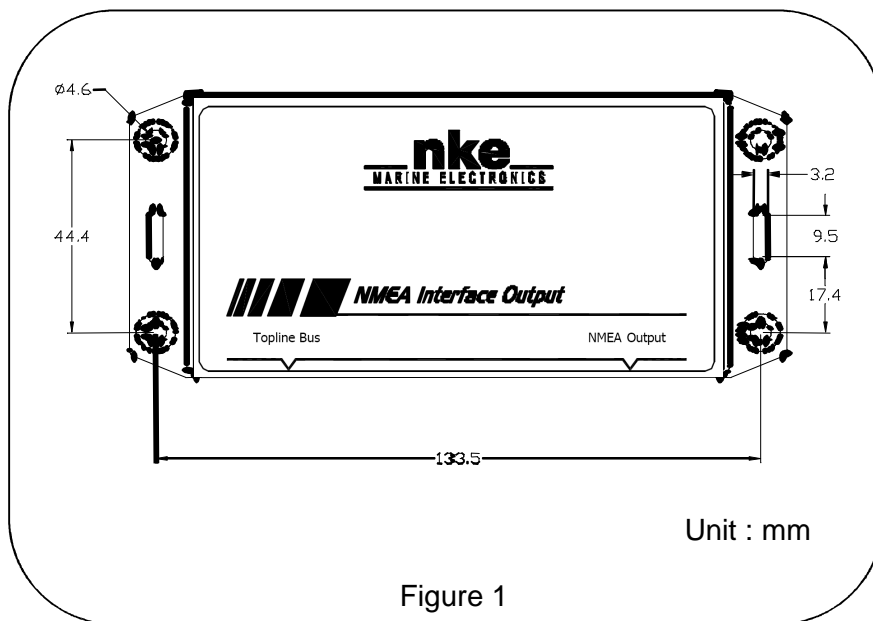


Figure 1

#### CAUTION:

- Connecting the **NMEA output interface** must be carried out with the power switched off.



## 6.4 Connecting the NMEA output interface to a PC and a Gyrographic

- Make the bus cable run from the **NMEA output interface** to the **TOPLINE** terminal box of your installation.
- Connect the bus cable inside the terminal box as shown in Figure 2.
- Connect the SubD connector to the PC's COM port (RS232) (a USB/RS232 adapter may be used).
- Setup your navigation software so that it transmits the navigation information on the PC's RS232 port, then perform the initialization of the Gyrographic's NMEA input interface (refer to the Gyrographic's user guide).

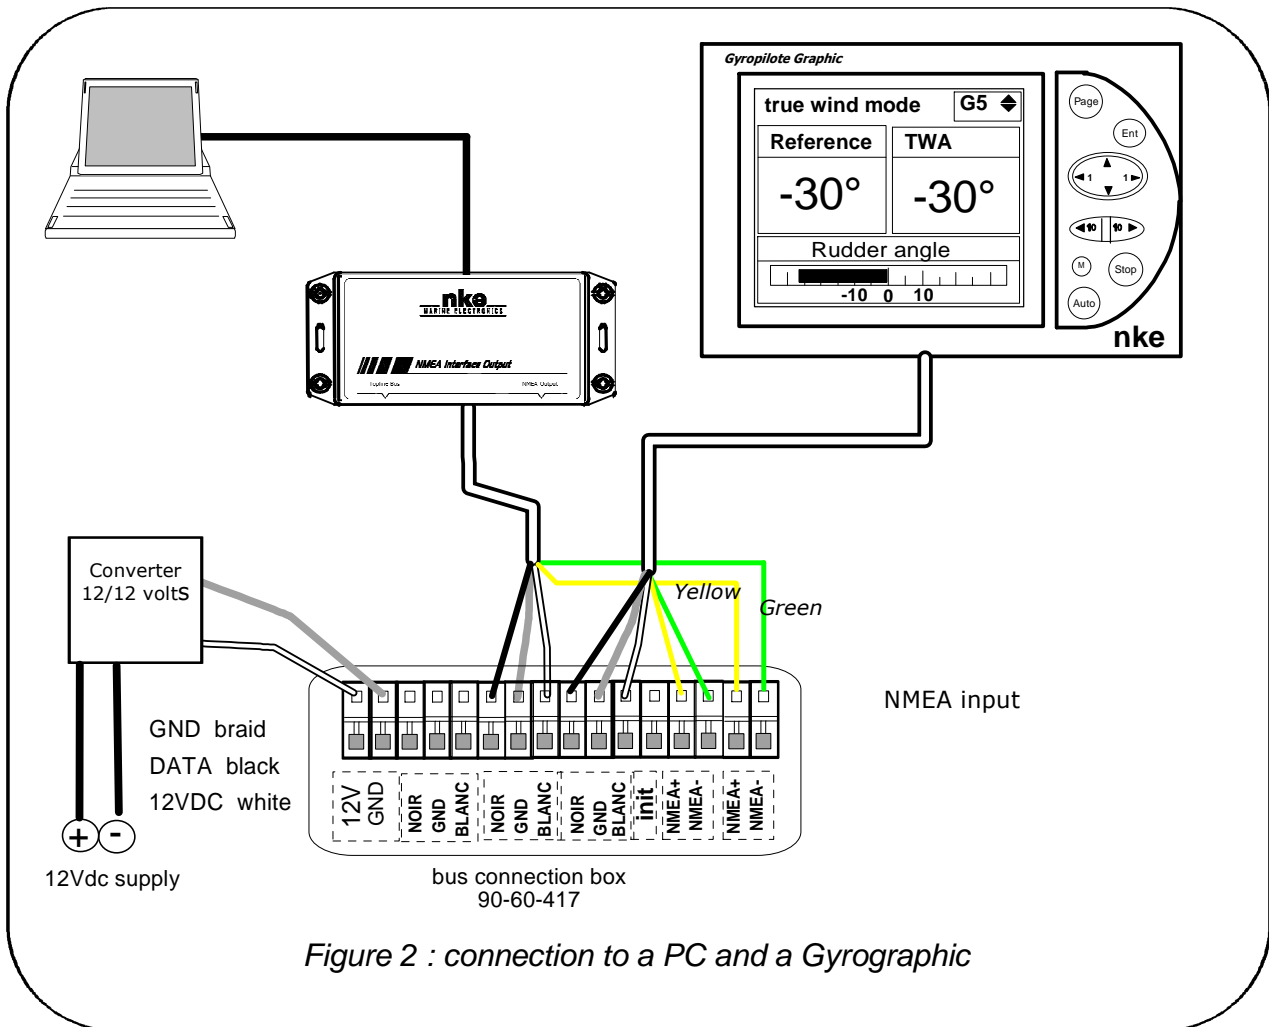


Figure 2 : connection to a PC and a Gyrographic

## 6.5 Connecting the NMEA output interface to a PC and a TL25

- Make the bus cable run from the **NMEA output interface** to the **TOPLINE** terminal box of your installation.
- Connect the bus cable inside the terminal box as shown in Figure 3.
- Connect the SubD connector to the PC's COM port (RS232) (a USB/RS232 adapter may be used).
- Setup your navigation software so that it transmits the navigation information on the PC's RS232 port, then perform the initialization of the TL25's NMEA input interface (refer to the TL25's user guide).


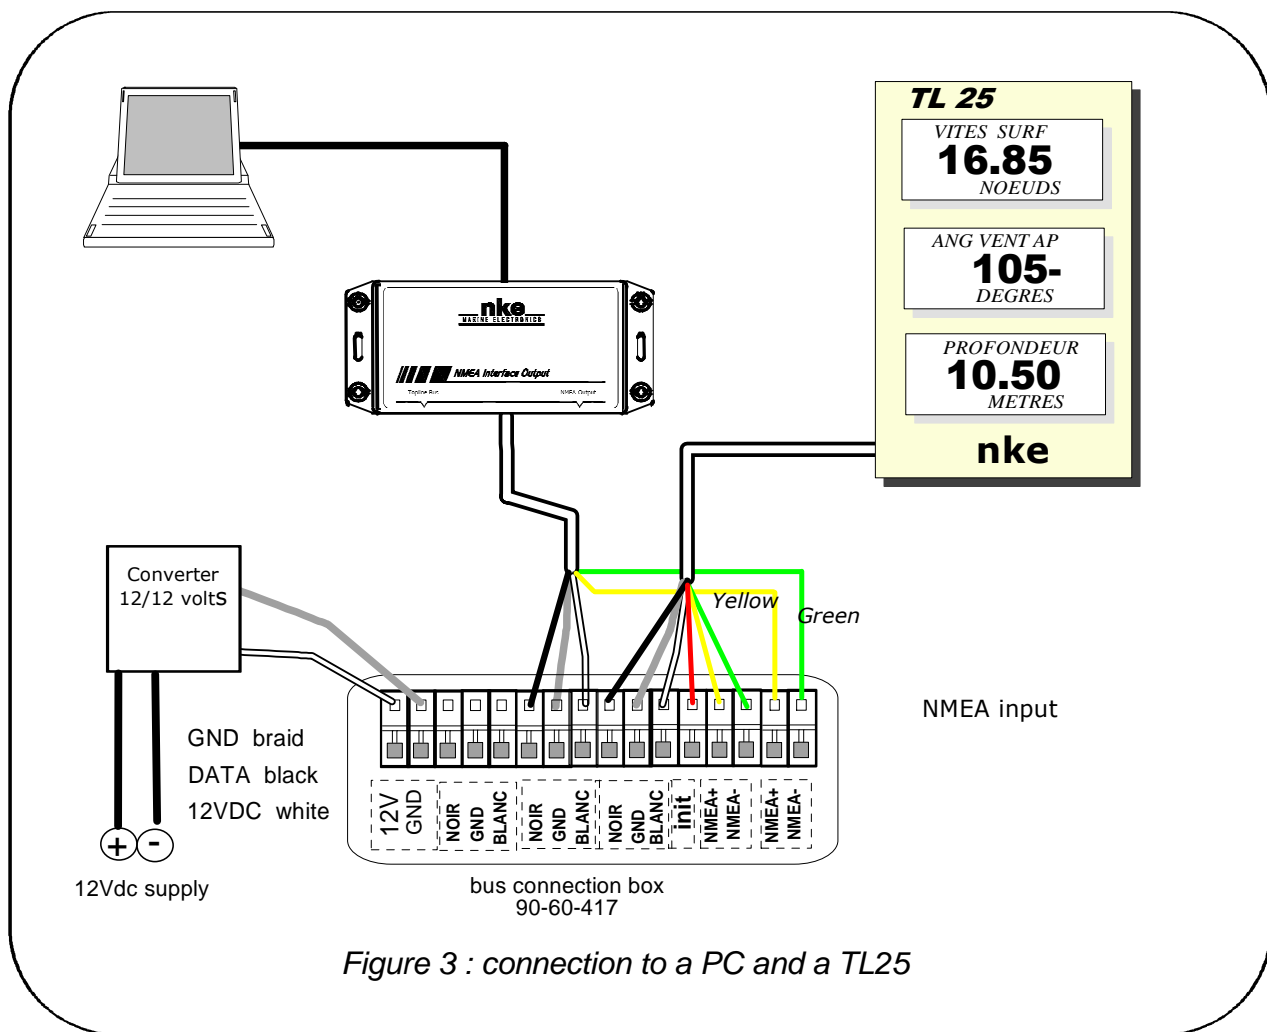


Figure 3 : connection to a PC and a TL25

## 6.6 Connecting the NMEA output interface to a PC and an NMEA input interface

- Make the bus cable run from the **NMEA output interface** to the **TOPLINE** terminal box of your installation.
- Connect the bus cable inside the terminal box as shown in Figure 4.
- Connect the SubD connector to the PC's COM port (RS232) (a USB/RS232 adapter may be used).
- Setup your navigation software so that it transmits the navigation information on the PC's RS232 port, then perform the initialization of the NMEA input interface (refer to the user guide for the NMEA input interface).

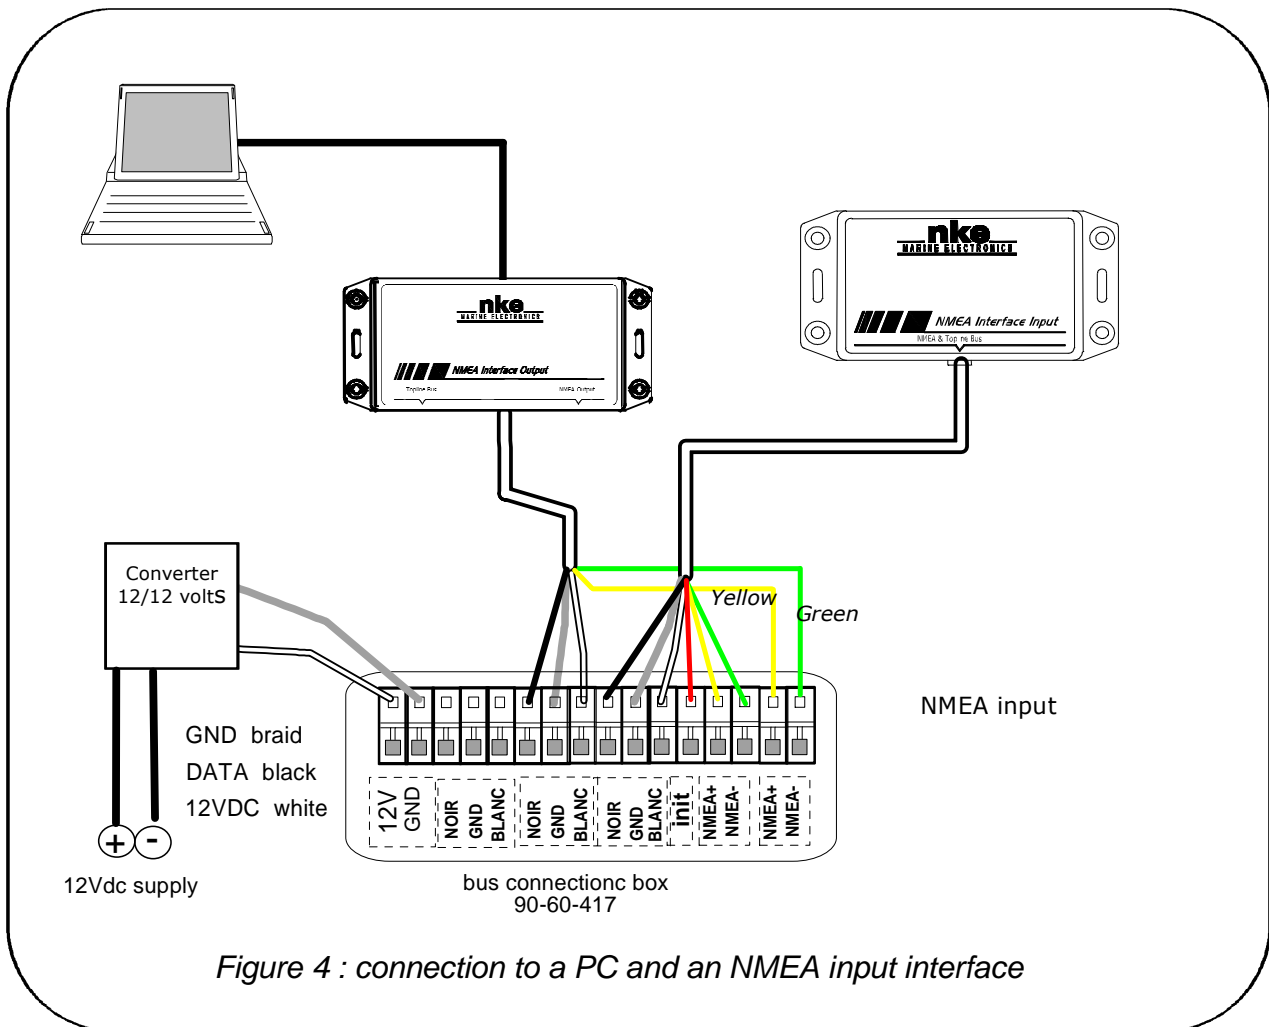

## 6.7 Connecting the NMEA output interface to a listening apparatus

- Make the bus cable run from the **NMEA output interface** to the **TOPLINE** terminal box of your installation.
- Connect the bus cable inside the terminal box.
- Cut the SubD connector.
- Connect the blue wire to the “+NMEA” of the listening apparatus and the earthing braid to the “– NMEA”. Isolate the other wires.

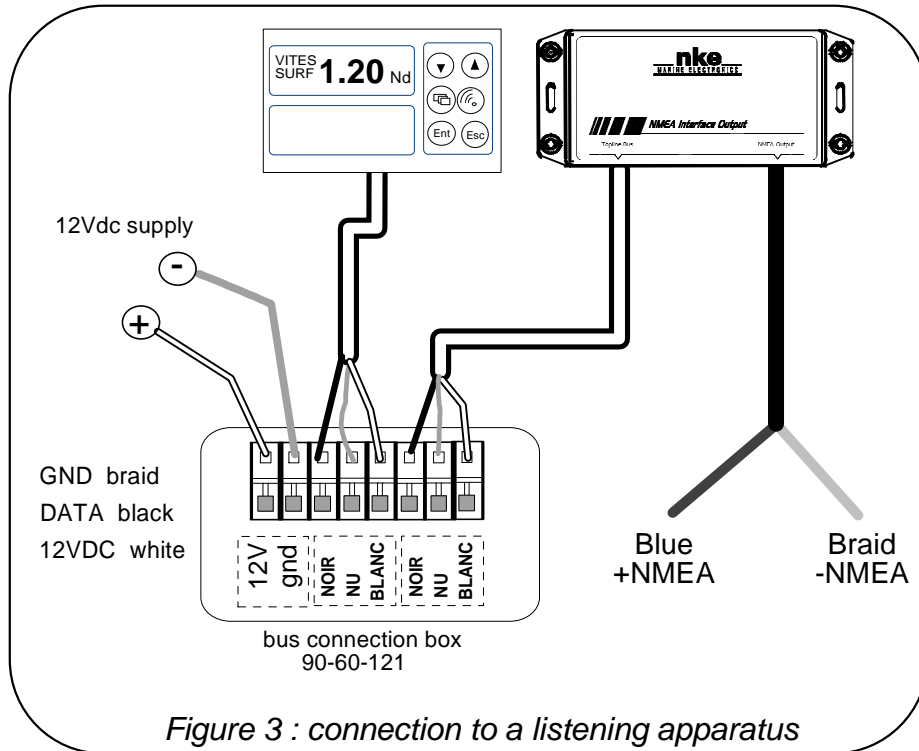


Figure 3 : connection to a listening apparatus

If you reduce the length of the bus cable, strip and galvanise the wires before connecting them inside the terminal box.

### Identification of the cable wires

Bus cable 3 conductors	Wire identification	
White wire	+12V	TOPLINE bus
Black wire	Topline data	
Braid	GND	
NMEA cable 5 conductors	Wire identification	
Braid	RX & TX – NMEA	
Blue wire	RX +NMEA	
Red wire	NC	
White wire	TX +NMEA	
Yellow wire	NC	
Green wire	NC	