

REMOTE CONTROL

FOR *MULTIFUNCTION TOPLINE* DISPLAYS

90-60-245



USER GUIDE and INSTALLATION GUIDE

Zi de Kerandré – Rue Gutemberg – 56700 – HENNEBONT – FRANCE

www.nke-marine-electronics.com

nke

MARINE ELECTRONICS



+33 297 365 685

SOMMAIRE

1 USING	3
1.1 PRESENTATION.....	3
1.2 KEYPAD FUNCTIONS OF THE REMOTE CONTROL	3
1.3 « MAN OVER BOARD » FUNCTION	4
1.4 TECHNICALS SPECIFICATIONS	4
2 INSTALLATION AND INITIALISATION OF THE REMOTE CONTROL	5
2.1 MOUNTING	5
2.2 CONNECTING TO THE <i>TOPLINE BUS</i>	5
2.3 FIRST INITIALISATION.....	6
2.4 RE-INIT PROCÉDURE.....	6

1 USING

1.1 Presentation

The **remote control Topline** is designed to control all **Multifonction** displays of the **Topline** range : **TL25**, **SL50**, **DL18** et **Performance**. It is connected to the **TOPLINE bus** of your installation. It is also designed to start the regatta chronometer and to set the lighting.

1.2 Keypad functions of the remote control



-  key

The remote control also enables you to control the other displays of your **TOPLINE** installation, the address of which is lower than the address of the remote control. Press this key to select the **TOPLINE** display, which you wish to operate.

-  key

Press this key to select one of the screens of the **displays**. The selected screen flickers. Note that this key is useless for the **Multifonction SL50**.

-  **Low key** and  **High key**

These keys allow to select a different channel to the one already displayed. They also allow to increment or decrement a data which is in the process of being modified.

-  key

This key allows to access the sub-channels and to validate the settings you implement. Brief pressure on this key also allows to set the level of lighting.

-  **Man Over Board key**

See below

1.3 « MAN OVER BOARD » function

Man Over Board key

Press this key for 5 seconds, and the function « Man over board » is activated. When a speedometer and a compass are connected to the **TOPLINE bus**, the displays then automatically indicate the estimated heading and distance to reach the man over board. If your installation only comprises a speedometer, then only the estimated distance will be displayed.

To suspend the audible alarm (during the recovery operation of the man over board, for example), press the **Ent** key. The estimated heading and distance to reach the man over board remain on the display.

To disable the « Man over board » alarm, you must cut off the power supply of your **TOPLINE** installation. This deactivation procedure is a little long, but allows to save the information of heading and distance of the « Man over board » to the memory.

CAUTION : the calculation of the estimate, for the « Man over board » function, does not take into account the drift of the ship caused by the current and the wind.

1.4 Technicals specifications

1. Tightness : IP68
2. Weight : 65grs.
3. Dimensions in mm : L x H x W : 65 x 91 x 23
4. Operating temperature : -10°C to +50°C
5. Storage temperature : -20°C to +60°C

2 INSTALLATION AND INITIALISATION OF THE REMOTE CONTROL

This chapter describes the installation and the initialization of the *remote control*.

IMPORTANT

1. Any electrical connection on the **TOPLINE bus** must be carried out with the terminal box 90-60-417 (equipped with a connection terminal for the NMEA input).
2. Only use **TOPLINE bus** cable of the type 20-61-001.
3. Any intervention on the **TOPLINE bus** must be carried out with the installation power switched off.

2.1 Mounting

Usually installed in the cockpit on a flat surface, it has to be at least 20 cm away of a magnetic compass.

The location of the remote control must be at more than 20cm from magnetic compass.

- 3 drill a hole with a diameter \varnothing 12, at the locating place,
- 4 To prevent water ingress, grease the hole with silicon grease and mount the remote control after having removed the protection on the double side tape.
- 5 Firmly press the remote control body bulkhead so that the remote control is well fixed.

CAUTION :

Do not use glue putty to mount the *remote control*.

To avoid damage to the plastic made keyboard, select a location away from a heat source or too exposed to sunlight.

5.1 Connecting to the *Topline bus*

- Make the bus cable run from the *remote control* to the **TOPLINE** terminal box of your installation.
- Connect the bus cable inside the terminal box. Faites cheminer le câble bus de la télécommande vers la boîte de connexion **TOPLINE** de votre installation.

If you reduce the length of the bus cable, strip and galvanise the wires before connecting them inside the terminal box.

Identification of the cable wires

White cable 3 wires	Wire identification	
White wire	+12V	TOPLINE Bus
Black wire	<i>Topline</i> Data	
Braid	Earth	

5.2 First initialisation

The Topline Bus sees the Remote Control as a display. It then has a number between **0** and **20**. It can act only on the displays that has a number inferior to its own.

If you want that the remote control controls all the displays. the remote control should be the last numbered.

When all the displays have been numbered :

- Switch on the installation.

- Wait for a few seconds.

- Push on one button of the remote.

 - The master shows « Creat Liste ».

- The other multifunctions show « **Liste** ».

From that moment, the master gives a number to the Remote Control. This number is stored and the remote control can act on all the multifunctions with an inferior number.

5.3 Re-init Procédure

Set the number of the remote control to **0** :

- Switch off the system

- Press and maintain on any button of the remote control

- Switch on the power

- After a second, loose the button

- Switch off the system without pushing any button

The remote control then has the number **0**. See the obove procedure to re-number it so that it can control again the displays.

Caution : If the LED of the remote control is not flashing after the initialisation, the remote control is either faulty or badly connected to the Bus..

